



A-1018/PL, A-1020/PL SUSPENDED CEILING INSTALLATION

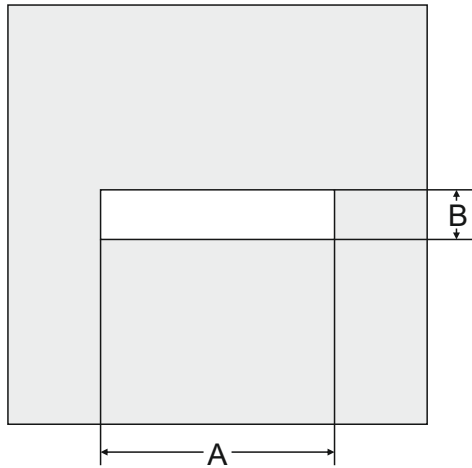

1. Open a hole according to each model.


A-1018/PL A= 33cm, B= 7cm
A-1020/PL A= 39cm, B= 7cm

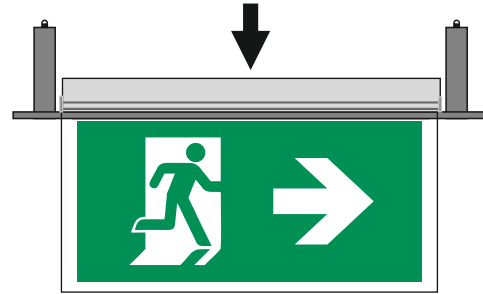

2. Perform the required cable connections and place the illumination sign in to the base.



Retaining tags

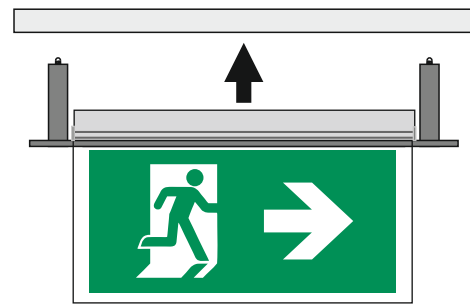


3. Push upwards the base. Make sure that the retaining tags are not expanded.




4. Fasten the two retaining screws clockwise and the retaining tags will expand until the base is securely installed.

A-1018/PL, A-1020/PL SUSPENDED CEILING INSTALLATION

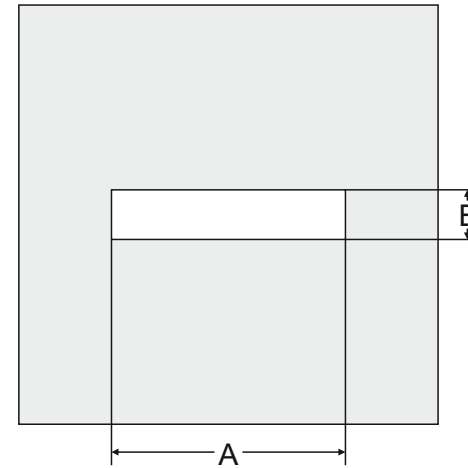

1. Open a hole according to each model.


A-1018/PL A= 33cm, B= 7cm
A-1020/PL A= 39cm, B= 7cm

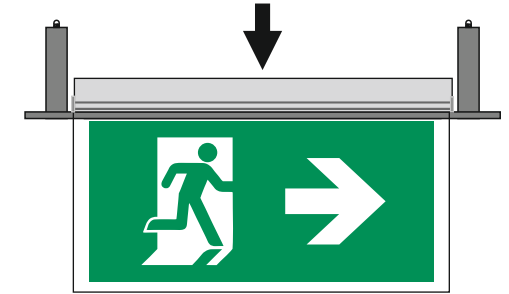

2. Perform the required cable connections and place the illumination sign in to the base.



Retaining tags

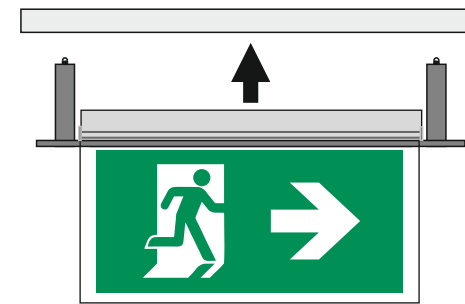

3. Push upwards the base. Make sure that the retaining tags are not expanded.



4. Fasten the two retaining screws clockwise and the retaining tags will expand until the base is securely installed.